



# EVAC System Software V3.0

## VA-6000ST



### Description:

- \* It is operated in the computer to connect the controller by LAN, supporting operation in Windows2003/Windows XP/Windows7 and other system platforms.
- \* The operations of the system software are including Zone Control, Status Monitor, Offline Program Edit/Upload/Download, Event Record, System Configuration, User Management, etc.
- \* Guiding System configuration, quickly complete the system basic configuration
- \* Automatic and timing playing function to achieve timing programmed playing in the designated zones for unattended operation.
- \* Built-in automatic timing correction when software launch.
- \* It supports the login with multiple user passwords and the synchronous operation by multiple software platforms.
- \* It supports system configuration import and export to ensure the safety of the configuration data.

### Setup Appearance:

Double-click the installation folder, then just click "Next Step" one by one to finish the software installation, which is the system default installation way and very conveniently.



 
### Login interface:

After running the software, please login the correct user name and password for the sake of system safety.




### Module configuration interface:

The module information of current configuration will be graphics to make sure the intuitive understanding and quick operation.

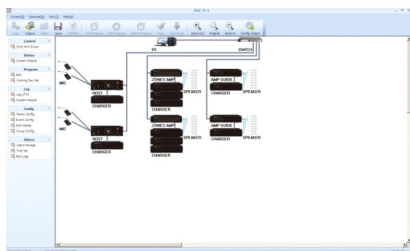


### Zone operation interface:

 Quick playing the evacuation voice, warning voice and BGM. It controls the switch on or off status of the zones, the volume adjustment, line/mic selection and also real time monitor the zone operation status.

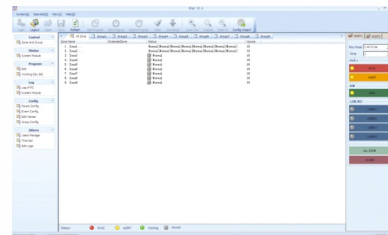


### Status inquiry interface:

 A real-time monitoring to the operation status of the system controller, zone amplifier, changeover, mic, and battery charger.

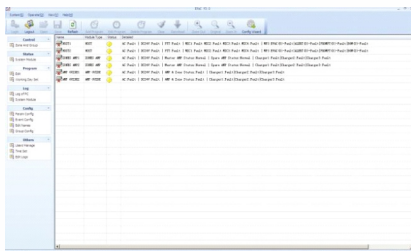


### Program timing interface:

 Edit the system's automatic operation procedure in 24-hour 7 days, including BGM playing, zone timing switch on and off status, volume adjustment and zone selecting.

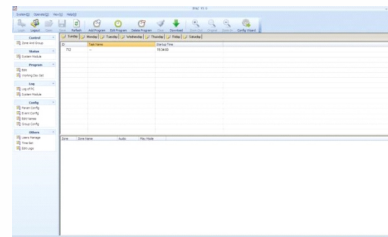

### System daily record interface:

 It records the log of the PC operation, system controller, zone mixer amplifier, changeover operation and monitoring.

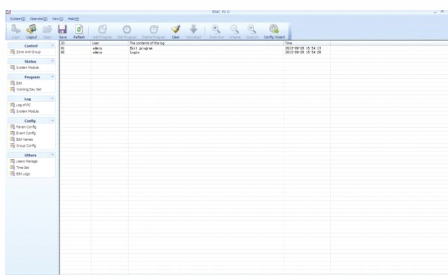

### Configuration module interface:

The configuration module consists of system parameter, emergency event, name modification and grouping. The configuration parameters for controller, zone amplifier, changeover, contact, partition and grouping, etc., which are applied to the basic configuration setting.

